

ENHANCER 2000 INSTALLATION

Required tools:

- Phillips screwdriver
- IC extractor or small, flat-bladed screwdriver. An IC extractor is recommended, but not necessary (the screwdriver will suffice). If using a screwdriver, wrap tape around the tip to prevent damage to the circuit board.
- Hand or power drill. Necessary for installation of the ROM selector switch in the Enhancer 2000 case assembly.
- Silicone Sealant, RTV, epoxy, superglue, or any other general-purpose adhesive. This will be used to bond the switch wire to the Enhancer 2000 circuit board in order to keep it from interfering with the drive mechanism.

Procedure:

1. If a disk is present in the Enhancer 2000, remove it.
2. Make sure that the Enhancer 2000 and your computer are OFF. Also make sure that any other peripherals attached to the serial bus are also switched OFF.
3. Unplug the Enhancer 2000 power supply cord from its wall outlet. Unplug the power supply and serial bus cables from the rear of the Enhancer 2000.
4. Turn the Enhancer 2000 upside-down and remove the eight screws from the bottom of the drive as indicated in Figure 1 below.

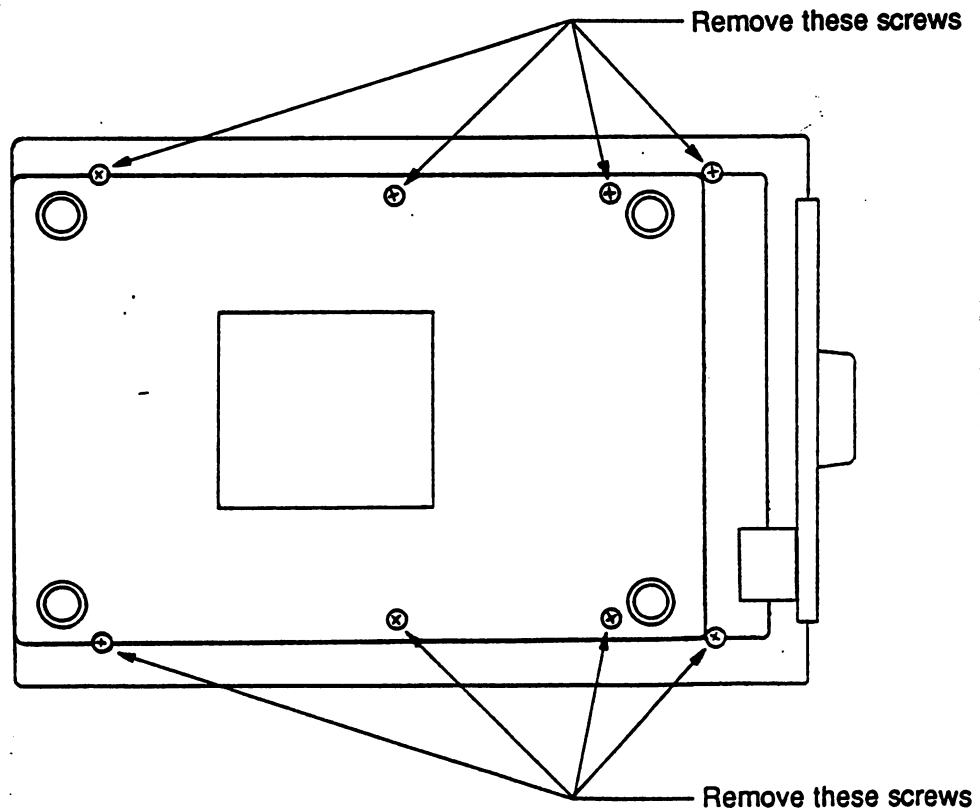


Figure 1 CASE SCREW REMOVAL

